Welcome to ZOMM.

Congratulations on your new Wireless Leash Plus!

Included in this package:

- 1 Wireless Leash Plus
- 1 micro-USB cable
- 1 USB wall charger
- 1 quick-release keychain

Questions? Contact our world-class service team at support.zomm.com

Getting Started:

This guide will help you get started with your Wireless Leash Plus in four easy steps. For more information on your Wireless Leash Plus or to download a full user manual, visit our support center at **support.zomm.com**

In addition to what is included with your Wireless Leash Plus , you will need:

- Mac or Windows computer*
- Mobile phone or tablet
- Internet connection*

***Internet connected Mac or PC is required to customize the Wireless Leash Plus. Use of the Wireless Leash Plus does not require a personal computer.**

© ZOMM, LLC 2010, 2011, 2012 ALL RIGHTS RESERVED.
MATERIAL PRESENTED WITHIN SUBJECT TO CHANGE WITHOUT NOTICE.
BLUETOOTH® IS A TRADEMARK OWNED BY THE BLUETOOTH SIG, INC. AND IS USED UNDER LICENSE.
ZOMM®, WIRELESS LEASH™, Wireless Leash™, AND myZOMM™ ARE ALL TRADEMARKS OF ZOMM, LLC.
ANDROID™ IS A TRADEMARK OF GOOGLE, INC. BLACKBERRY® IS A TRADEMARK OF RESEARCH IN MOTION, LTD.

1 Charge your Wireless Leash Plus

For optimal battery life, charge your Wireless Leash Plus for a full 4 hours. Use the included micro-USB cable to charge your Wireless Leash Plus using the USB wall charger.

2 Prepare your Wireless Leash Plus to be Customized

- Using a Mac or PC, navigate your web browser to **my.zomm.com**
- Follow the on-screen instructions to prepare your Wireless Leash Plus for customization.

*If you do not have an internet-connected Mac or PC, please skip to Step 4 for pairing instructions.

3 Customize Your Features with myZOMM

After completing step 2, select the custom settings within myZOMM for your Wireless Leash Plus, then select "Save."

- Name your Wireless Leash Plus
- Set out-of-range alarm distance
- Personalize with available custom tones
- Set the volume of alerts

With myZOMM, you can also manage multiple ZOMM devices and receive the latest ZOMM updates for free.

4 Pairing the Wireless Leash Plus

The following instructions will help you to pair the Wireless Leash Plus to your mobile phone. If you need any help, visit zomm.com/pairing for instructional videos, walkthroughs, etc. Before you begin, make sure that the Wireless Leash Plus is unplugged and turned off (no lights or flashing).

Most Mobile Phones:

1. Navigate to your phone's *Bluetooth* menu and confirm that the *Bluetooth* feature is turned on.
2. On your Wireless Leash Plus, press and hold the Z-button until the 2nd beep (6 seconds).
3. From your phone's *Bluetooth* menu, select the option to search for (or add) *Bluetooth* devices.
4. Select the name of your Wireless Leash Plus (ZOMM is default) from the list of devices found. If a PIN or passkey is required, use 0000.

When connected, the Z-light will flash once every few seconds.

iOS (Apple):

1. Navigate to "Settings" > "General" > "*Bluetooth*."
2. Make sure the *Bluetooth* feature is on.
3. On your Wireless Leash Plus, press and hold the Z-button until the 2nd beep (6 seconds).
4. On the Apple device, touch the name of your Wireless Leash Plus (ZOMM is default) when it appears in the "Devices" list.

When connected, the Z-light will flash once every few seconds.

4 Pairing the Wireless Leash Plus (continued)

Android:

1. Navigate to "Settings" > "Wireless & Networks" > "*Bluetooth* settings."
2. On your Wireless Leash Plus, press and hold the Z-button until the 2nd beep (6 seconds).
3. On the phone, make sure your *Bluetooth* feature is on and then select "Scan for devices."
4. Select name of your Wireless Leash Plus (ZOMM is default) from the list o found devices. If a PIN or passkey is required, use 0000.

When connected, the Z-light will flash once every few seconds.

Blackberry:

1. Navigate to "Manage Connections" > "Set up *Bluetooth*."
2. On your Wireless Leash Plus, press and hold the Z-button until you hear the 2nd beep (6 seconds).
3. On the Blackberry, select "Search."
4. Select the name of your Wireless Leash Plus (ZOMM is default) from the list of found devices. If a PIN or Passkey is required, enter 0000.
5. If prompted to connect to the ZOMM, select "Yes."

When connected, the Z-light will flash once every few seconds.

To see our full pairing guide, visit zomm.com/pairing.

Frequently Asked Questions

Can I turn the volume of my Wireless Leash Plus speakerphone up?
Yes. If the Wireless Leash Plus speakerphone volume is low, adjust it using the volume controls on your mobile phone during an active call. During an active call, press the volume up button on your phone to turn up the volume of the Wireless Leash Plus.

How often do I need to charge my Wireless Leash Plus?
Naturally, the more you use your speakerphone or alarm, the shorter your battery life will be. Your Wireless Leash Plus can last up to 6 days of standby or two hours of continuous talk time. When the battery is low, you will be informed by a "Battery Low" warning.

What is the ZOMM Replacement Guarantee?
The Replacement Guarantee is insurance for your Wireless Leash Plus. If your Wireless Leash Plus is damaged or broken for any reason, you can receive up to two free replacements over the course of two years. Visit zomm.com/rg to purchase or learn more.

HOW TO: Trigger a Distance Alarm or Find Your Keys

With the default settings, your Wireless Leash Plus will sound a progressive alarm when your phone or tablet moves out of range (30-120 feet).

To trigger a distance alarm:

When your Wireless Leash Plus and mobile device are separated (beyond the mobile device's *Bluetooth* range), your Wireless Leash Plus will vibrate, flash and alarm. If the *Bluetooth* wireless connection with your phone is lost or if your phone is turned off while connected to your Wireless Leash Plus, this will also trigger the distance alarm. To silence the alarm, tap the Z-Button once.

To use your phone to find your keys:

If you've attached your Wireless Leash Plus to your keys and need to locate them, press the "Find" button in the myZOMM App. If your phone does not support mobile apps, you can trigger the distance alarm by turning the *Bluetooth* feature of your mobile phone off. (Your Wireless Leash Plus must be connected for this feature to work.)

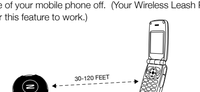

HOW TO: Manage Incoming Calls

When a call is incoming, your Wireless Leash Plus will flash, vibrate, and then ring to alert you. (This feature can be customized.)

To answer an incoming call:

Tap the Z-button once to answer the call. The audio for the call will be in the Wireless Leash Plus speakerphone.

To reject an incoming call:

Tap the Z-button twice in a row. This will send the call to voicemail.

To transfer the call to your phone (or back to your Wireless Leash Plus):

During an active call, tap the Z-button once to route the call to the phone and tap again to route the call back to the Wireless Leash Plus.

To end the call:

During the call, tap the Z-button twice in a row.

Important:
The volume of your Wireless Leash Plus speakerphone can only be adjusted using the volume controls on your mobile phone during an active call.

HOW TO: Connect to Emergency Assistance

You can easily use your Wireless Leash Plus to dial emergency assistance. To initiate this call, your Wireless Leash Plus must be on and paired to a mobile phone that has active cellular service.

Sound a panic alarm:

- Press and hold the Z-button for 6 seconds and release when the panic alarm is heard. To stop alarm, press the Z-button once.

To dial emergency services:

- Press and continue to hold the Z-button THRU the panic alarm (approximately 9 seconds) until you hear "Dialing Emergency Assistance".
- Release the Z-button and your Wireless Leash Plus will auto-dial 911* and will serve as a speakerphone for the call.

To end an emergency call:

To end an emergency call, you must do so from your mobile phone. You cannot end an emergency call from your Wireless Leash Plus.

***You can change the emergency number dialed by using the myZOMM software and/or App.**

About your Wireless Leash Plus

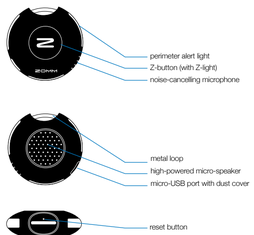

Questions? Contact our top-notch service team at support.zomm.com

To	Do this
Turn on the Wireless Leash Plus	Hold the Z-button until you hear the first beep (3 seconds). The Wireless Leash Plus will automatically reconnect with the last-paired device.
Turn off the Wireless Leash Plus	Hold the Z-button until you hear the first beep (3 seconds). The Z-light will turn off.
Answer incoming call	Tap the Z-button once to answer.
Ignore incoming call	Tap the Z-button twice to ignore.
Transfer active call to phone	Tap the Z-button once to transfer call.
Transfer active call	Tap the Z-button once to transfer call.
End active call	Tap the Z-button twice to end call.

To	Do this
Increase the speaker volume	When using the Wireless Leash Plus as a speakerphone during an active call, turn the volume up on your phone - this will adjust the volume of the speakerphone.
Sound panic alarm	Hold the Z-button until alarm sounds (6 seconds), then release the Z-button. The alarm will continue to sound until you tap the Z-button again.
Call emergency assistance	Hold the Z-button for 9 seconds through the panic alarm until the Wireless Leash Plus notifies you it is dialing emergency services.
Contact Customer Service:	Visit support.zomm.com and submit a ticket or talk to a customer service representative via phone or live chat.

Wireless Leash™ Plus

by ZOMM

Setup in 4 Easy Steps

1 2 3 4

qsg_v1.5m8_020112
ZOMM, LLC
9520 South Peoria Drive
Tulsa, OK 74137
ZMR-B-EN-AM